



Menu List

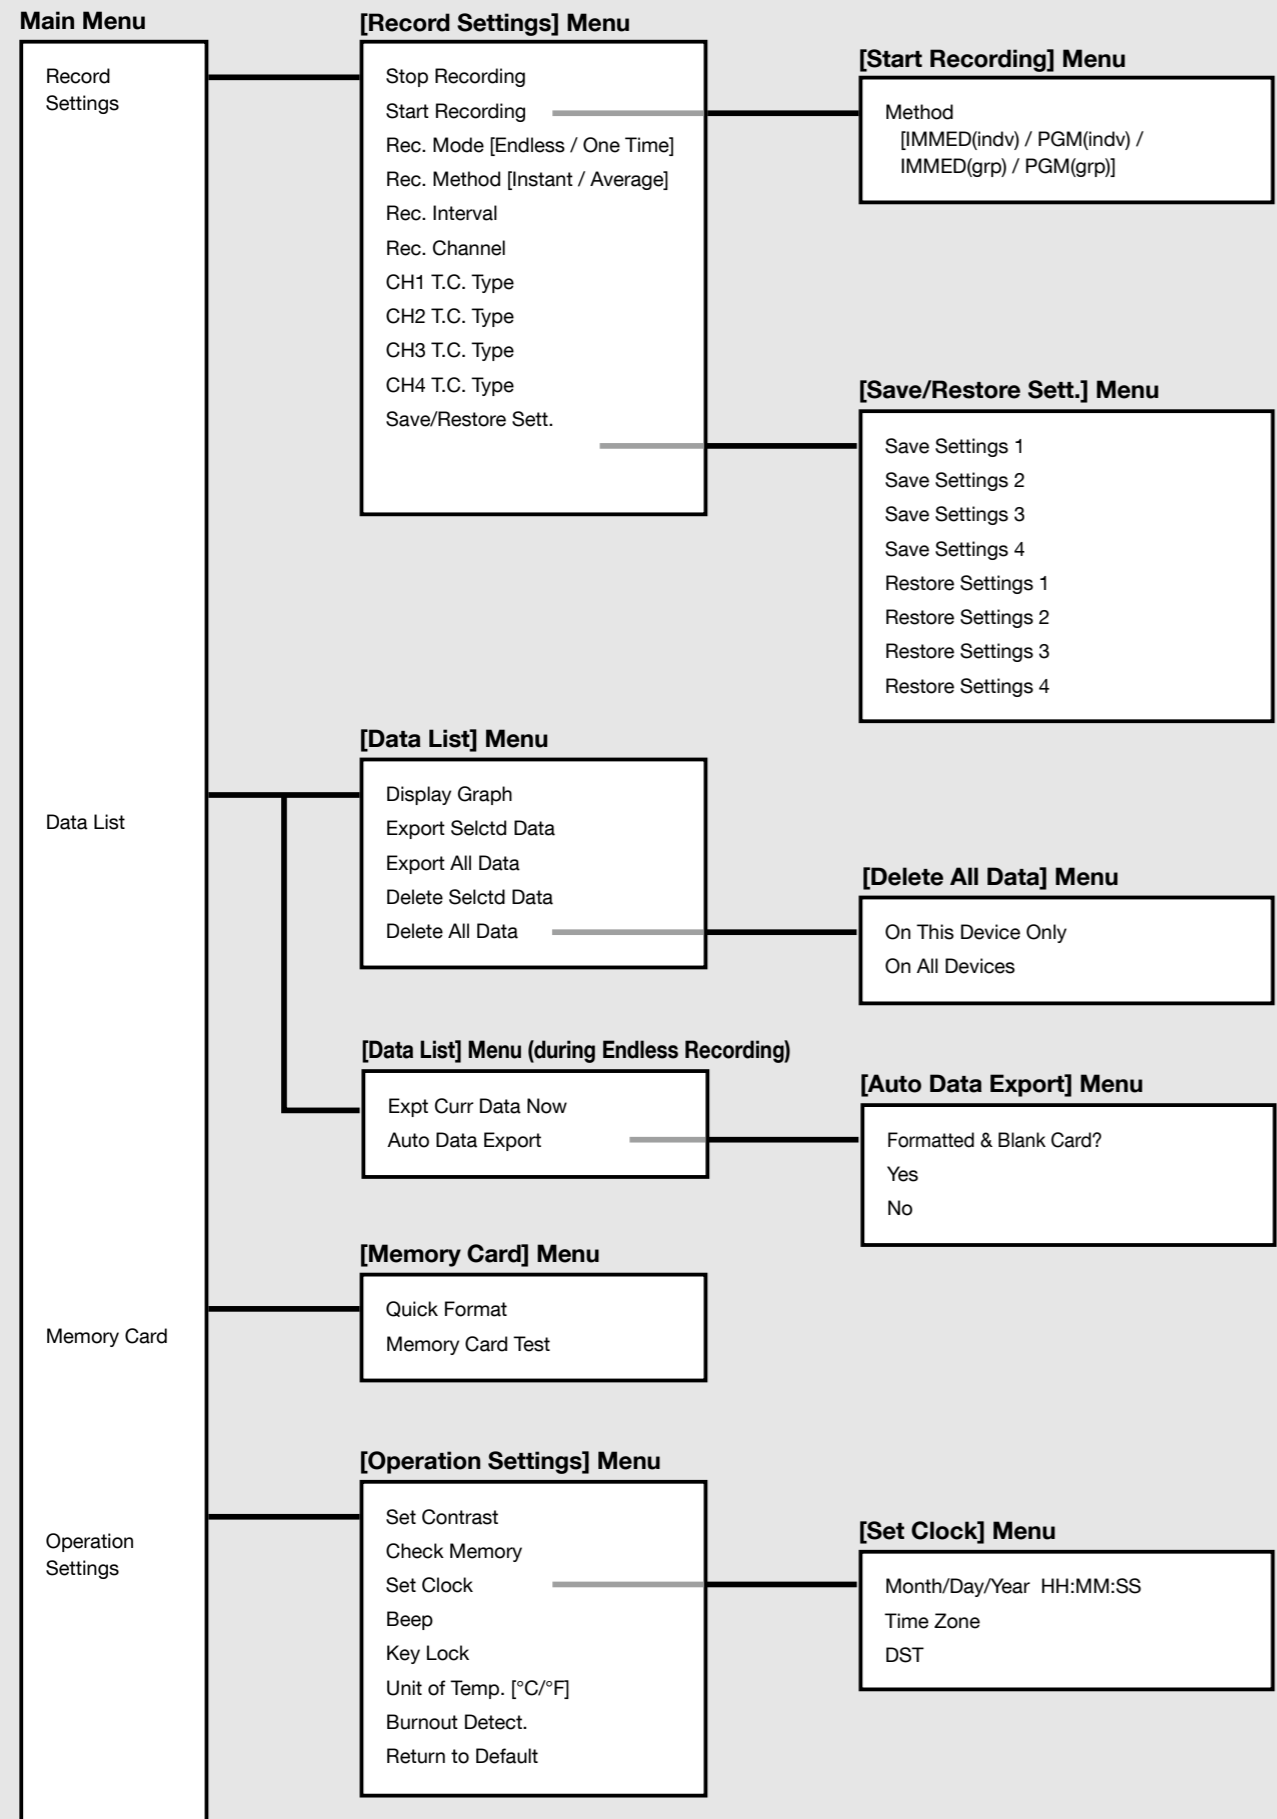


Touch Panel and LCD


Touch Panel

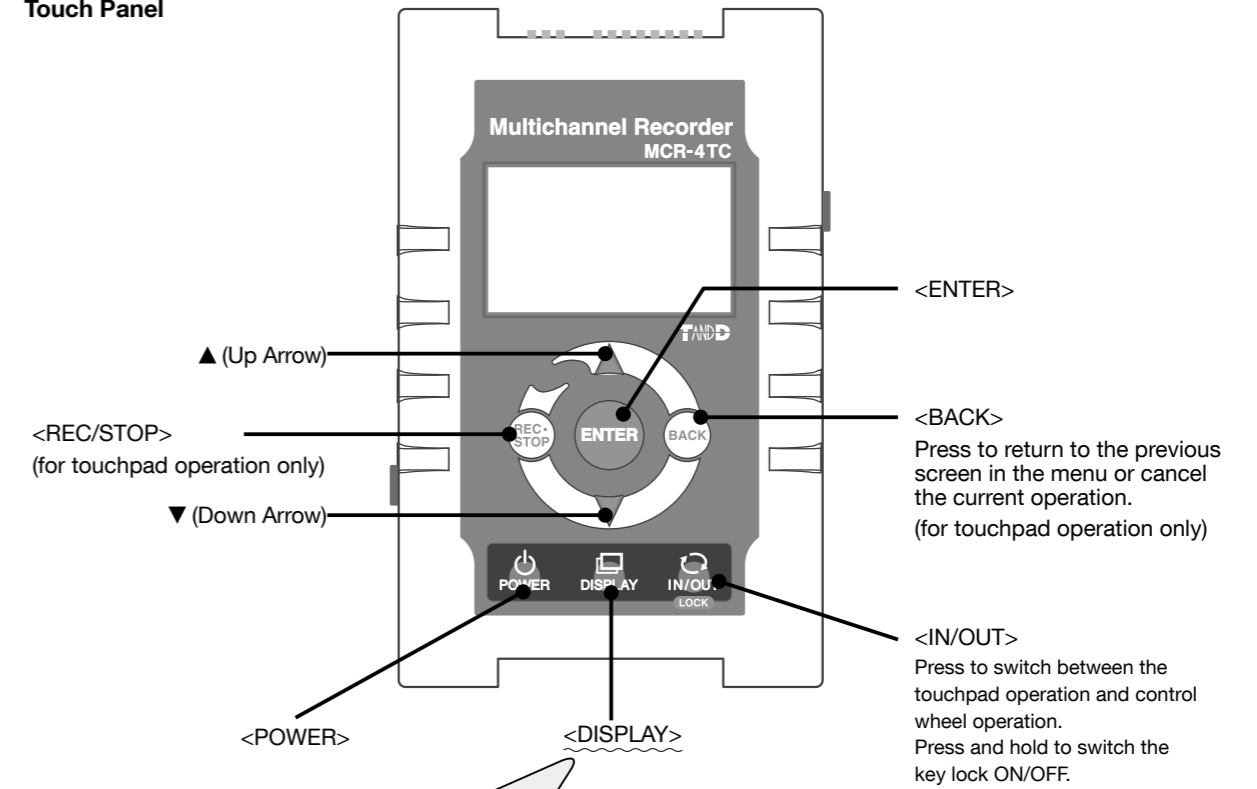

Each click of the <DISPLAY> button will switch the LCD display between [Menu Screen] - [Measurement Digital Display] - [Trend Graph Display].

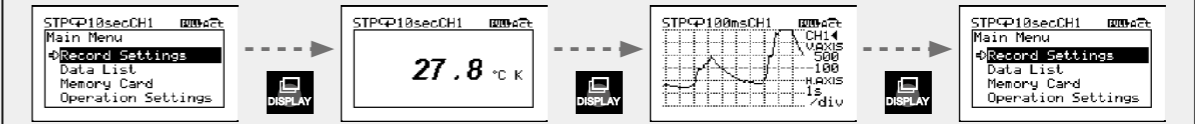

LCD Display and Icons

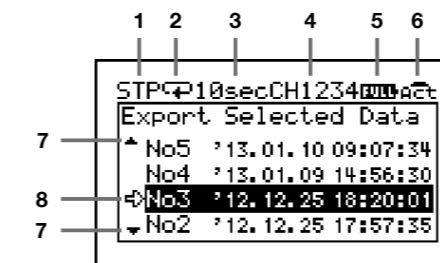

1. Recording Status	REC : Recording in progress STP : Recording stopped PRG : Waiting for programmed start IMM : Preparing immediate start
2. Recording Mode	: Endless mode : One-Time mode
3. Recording Interval	ms : millisecond(s) sec : second(s) min : minute(s) Aver : Recording Method is Average
4. Recording Channels	Channel(s) being measured and recorded
5. Battery Mark	: Running on external power : Running on battery
6. Operation Mode	: Touchpad operation enabled : Control wheel operation enabled : Touch Panel disabled
7. ▲ ▼	Indicates that there are more menu items above or below for view.
8. →	Currently selected item

The highlighted display shows the item currently selected, and the blinking highlight shows the item being changed. LCD backlight will be ON during operation.